

**GOBLIN**

**INSTRUCTIONS FOR USE**

**833 TEASMADE**



## PREPARATION FOR USE

Examine the rating plate on the back of the clock case and see that the voltage and frequency stated is suitable for the voltage and frequency of your supply.

NOTE: This TEASMADE is designed for use on alternating current only. It should be connected to a supply point which is not subject to interruption.

The TEASMADE is supplied with a length of 3-core flexible cable and should only be used with a suitable 3 pin plug.

If the plug is a 13 amp flat pin type or a 15 amp round pin fused plug, the fuse fitted must be of 3 amp rating. A lamp adaptor connection or any 2 pin plug must **not** be used.

**"WARNING – THIS APPLIANCE MUST BE EARTHED"**

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	— Earth
Blue	— Neutral
Brown	— Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E or by the earth symbol  $\perp$  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

The clock is self starting and will automatically start when connected. It is essential that the TEASMADE is operated on a firm level surface. If the surface is not level, malfunctioning and consequent damage could result.

The lamp shade is packed separately for transport. With the rectangular hole uppermost slide the lamp shade on to the metal bracket, inserting hook through the hole.

**Assemble kettle tube into kettle taking care that red fibre washer is in position under the collar.** Lightly screw down knurled nut.



## HAND SETTING

Adjust the clock to the correct time by turning the hand set knob on the rear of the clock case in an anti-clockwise direction only (See Fig. 2).

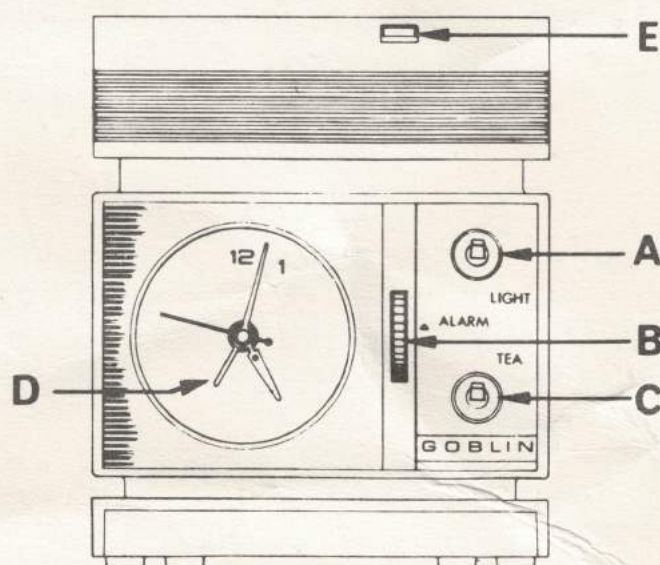


Figure 1.

Front elevation of set indicating:

- |                     |                           |
|---------------------|---------------------------|
| A) Light Switch,    | B) Alarm set thumb wheel, |
| C) Tea Switch,      | D) Alarm hand,            |
| E) Lamp shade hook. |                           |

## ALARM SETTING

Set the position of the alarm hand to the time which it is required by turning the knurled thumb wheel situated on the right hand side of the clock face in an upward direction. (See Fig. 1.)

## TO SET FOR MAKING TEA

Having completed the time set and alarm set, fill the kettle with water until it just touches the pointer inside the kettle rim when the kettle is level.

### WARNING

**If the kettle is overfilled there is a risk that boiling water may be ejected through the vent hole in the lid.**

Fit the lid in position and secure by pressing downwards and turning clockwise until tight.

The kettle must under no circumstances whatsoever be connected to the electricity supply direct but must only be used with the TEASMADE.

Place the kettle on the platform with the kettle socket to the rear, then insert the kettle connector. Avoid twisting or restricting the **free movement** of the cable.

Turn the tube of the kettle to the right of the TEASMADE (See Figure 2).

Put the required amount of tea in the teapot and place the teapot under the tube of the kettle, see Fig 2. When positioning the teapot make sure the movement of the tube is not restricted and that the kettle platform also has freedom of movement. Finally, place tea switch and light switch in the down position. (See Fig. 1.)

When the tea is made and the alarm sounds, return the tea switch to the up position. If the light is not required return the light switch to the up position also.

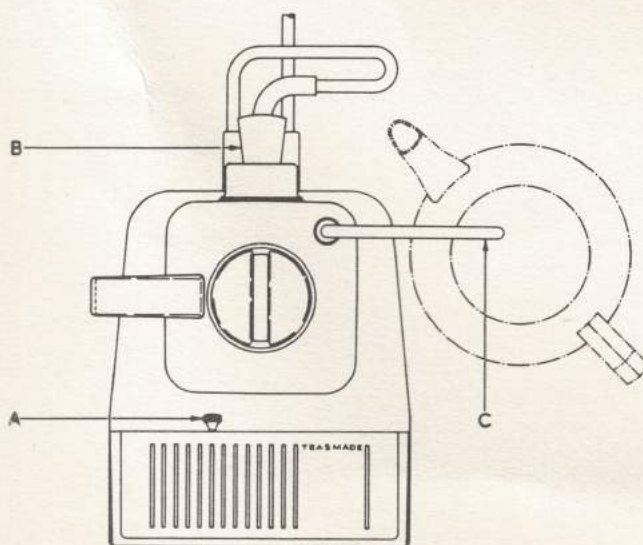


Figure 2. Top Plan indicating:

- A) Hand set knob, B) Kettle connector,
- C) Position of tube and teapot.



## **USE OF ALARM ONLY**

For use as an alarm only do not fill the kettle but plug the connector in position. Set the alarm a quarter of an hour later than the time required. i.e. If you want the alarm to sound at 7 o'clock, set the alarm hand at quarter past seven and place the tea switch in the down position.

To silence the alarm, return to the up position.

When used as an alarm only the light will not switch on automatically but can be used as required. See under "IMPORTANT" Para 3.

## **USE OF LIGHT ONLY**

When the TEASMADE has been set for automatic tea making the light can be used if required by placing the tea switch in the up position.

## **IMPORTANT**

1. Do not forget to place the teapot in position when setting the TEASMADE for operation.
2. Do not set the alarm to operate more than eleven hours ahead of the time required as the movement is of the 12 hour alarm type.
3. Always ensure that the movement of the kettle and platform is not restricted. Check that the kettle is in the correct position and that the connector cable is not twisted.
4. The TEASMADE is designed to use a 40 watt S.B.C. candle lamp.  
Replacing with a larger lamp or higher wattage could cause damage to the lamp shade.  
To replace lamp lift lamp shade up to clear retaining hook and pull forward. Fit new lamp and replace lamp shade.
5. This TEASMADE must not be stood in a tray when in use.



## **CARE AND MAINTENANCE**

To maintain the polished appearance of the kettle use a damp cloth followed by polishing with a dry soft cloth.

In the event that your TEASMADE requires servicing, please communicate with our Surrey Works, local branch office or the retailer from whom it was purchased.

In all communications please quote MODEL and SERIAL NUMBER ON THE RATING PLATE.

If it is found necessary for the TEASMADE to be returned, it should be carefully packed and sent carriage paid.

In accordance with the Company's policy on continued development and improvement, we reserve the right to modify the design without prior notice.

**GOBLIN ELECTRIC APPLIANCES LTD.**

**LEATHERHEAD SURREY**

**Telephone: Ashted 76121**

