
Instructions

for installation and use of the



GOBLIN

Teasmade

**AUTOMATIC TEA-MAKING
OUTFIT**

MODEL D. 25

READ THESE INSTRUCTIONS CAREFULLY!

The **GOBLIN**

"TEASMADE"

Automatic Tea-making Outfit


MODEL D. 25

The Goblin "Teasmade" is simple, reliable, automatic, and fully guaranteed. All the component parts are of best quality, designed and produced by highly skilled craftsmen.

Follow the instructions in this folder carefully and "Teasmade" will give you trouble-free service.

NOTE

THE GOBLIN "TEASMADE" IS
FOR USE ON
ALTERNATING CURRENT ONLY.

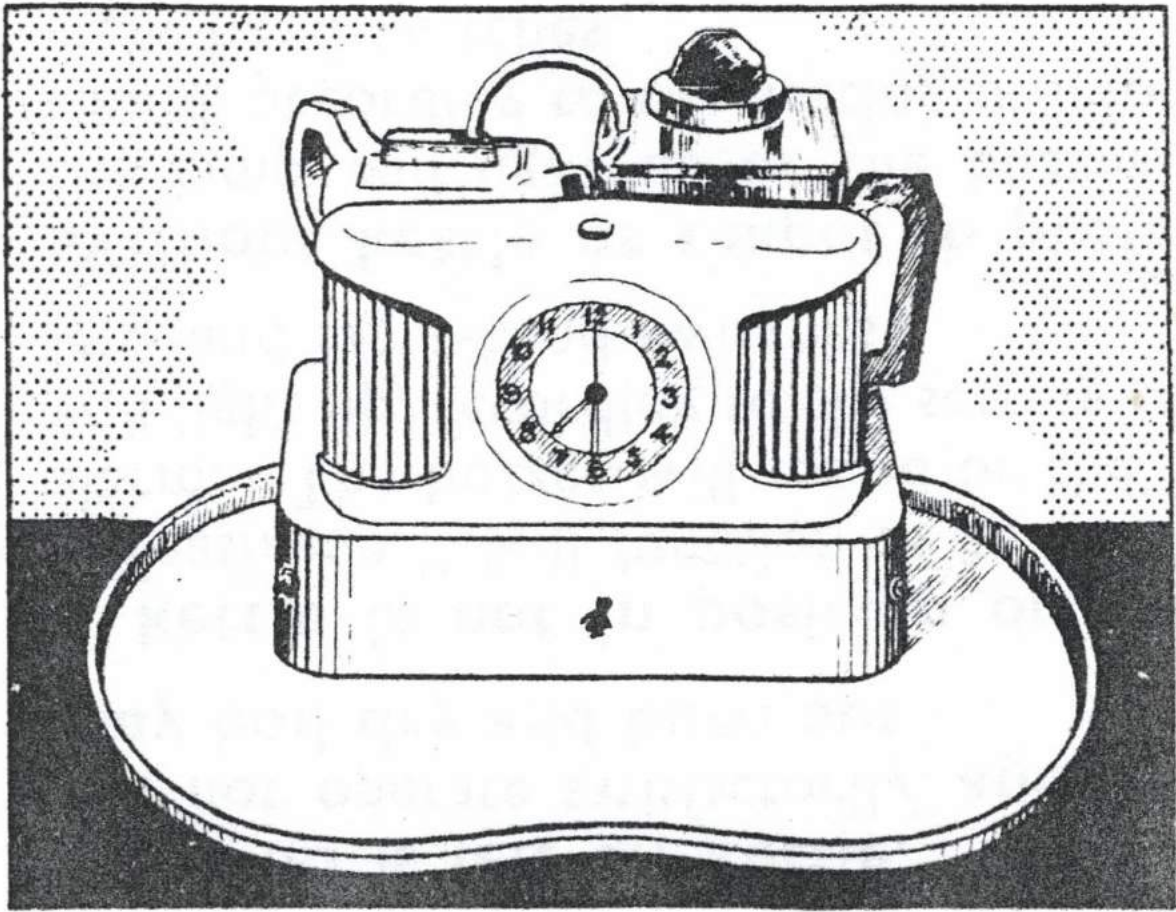

Current consumption of Kettle, 750 watts.
Current consumption of Lamps, 15 w. each.
The Teasmade is fitted with a self-starting
12 hour alarm movement, and care must
be taken to set Teasmade to operate
within 11 hours of the time tea is
required.

Service Notes.

If the "Teasmade" develops a fault notify the Company, or one of its branches, stating as far as you know the symptoms of the fault. **Do not return** the "Teasmade" until you receive a reply.


If requested to return the "Teasmade," observe carefully the following :—

1. Attach a label to the "Teasmade" giving your name and address.
2. To pack the "Teasmade," replace in the special carton supplied, or pack tightly with paper shavings, etc., in a wooden box, and return carriage paid.
3. Send us a separate* advice of despatch, quoting Model and Serial Number and giving full particulars.

*Address this advice to Service Depot.

HOW TO GET THE BEST OUT OF YOUR GOBLIN "TEASMADE"

CONNECTING UP

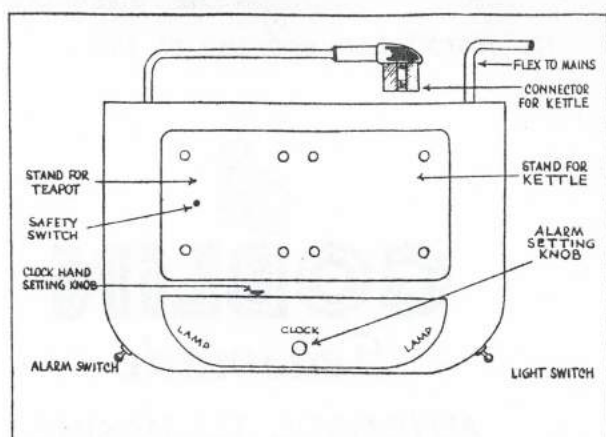

SWITCHES & ELECTRIC SUPPLY

First see that the voltage indicated on the "Teasmade" agrees with that of your electric supply. With both "Teasmade" switches in the "Off" position (up), connect "Teasmade" to the electric supply.

SETTING & SHUTTING OFF ALARM

Turn alarm-setting knob on top of clock, in direction indicated, to the time at which tea is required, and set clock to correct time.

To shut off alarm at any time, switch left-hand switch to "Off" (up).

For use as an alarm only, remove kettle, but leave teapot in position, and put left-hand switch in "On" (down) position.

TEAPOT

Put sufficient tea into teapot, replace lid and put teapot into position on rocking platform.

KETTLE

Fill kettle to within **one** inch of top, screw lid firmly into position, and place kettle on rocking platform so that kettle syphon is immediately over hole in teapot lid. Insert heater connector into kettle socket

OPERATION

With kettle, teapot and clock set as instructed and clock indicating any time **within 11 hours** of the time tea is required, place both switches in the "ON" (down)

position, and Teasmade will then operate as soon as the time set on the clock is reached. Shortly before the alarm is due to operate, current is switched on to the kettle. As the water boils, the steam pressure forces boiling water through the syphon tube and into the teapot. The weight of the water transferred from the kettle to the teapot rocks the platform on which they are positioned. This motion is sufficient to operate switches in the base to switch off the kettle, switch on the lamp and sound the buzzer, which should be switched off by means of left-hand switch. Keep left-hand switch in "Off" position when Teasmade is not required.

If while "Teasmade" is set ready for action, a light is required, put **right-hand switch up**. When "Teasmade" functions, and **left-hand switch** is put **up** to silence buzzer, the light will go out; but will come on again when **right-hand switch** is depressed.

WARNING

The Teasmade alarm movement has a timing cam for twelve-hour setting. It takes one hour to open the contacts once they have closed at the time indicated by the alarm hand on the clock dial. Because of this :- **Switch Teasmade "ON" only when within 11 hours of the time that tea is required.**

If Teasmade is switched on for more than 11 hours of the required time, the kettle will commence to heat up, and make tea within 12 minutes.

If the left-hand switch is "On" and the kettle in place without the teapot, the buzzer will immediately sound a warning. Either place teapot in position or switch off left-hand switch.

If the lid is left off kettle, "Teasmade" will not operate satisfactorily, and kettle may boil dry and burn out.

If kettle is not in position on stand, "Teasmade" will function as an ordinary alarm. The buzzer will sound or the lamp will light up, according to the setting of the left- and right-hand switches.

Without kettle or teapot in position, the lamp will light up or the buzzer will sound, according to the setting of left- and right-hand switches.

