

**GOBLIN**

**INSTRUCTIONS FOR USE**

**834B TEASMADE**

## PREPARATION FOR USE

Examine the rating plate on the back of the clock case and see that the voltage and frequency stated is suitable for the voltage and frequency of your supply.

NOTE: This TEASMADE is designed for use on alternating current only. It should be connected to a supply point which is not subject to interruption.

The TEASMADE is supplied with a length of 3-core flexible cable and should only be used with a suitable 3 pin plug. A lamp adaptor connection or any 2 pin plug must **not** be used. If a 13 amp flat pin plug is used, a 5 amp fuse, normally obtainable from your electrical dealer, should be fitted. If this is not obtainable then the standard 13 amp fuse can be used.

**"WARNING – THIS APPLIANCE MUST BE EARTHED"**

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	– Earth
Blue	– Neutral
Brown	– Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter E or by the earth symbol  $\perp$  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. The clock is self starting and will automatically start when connected. It is essential that the TEASMADE is operated on a firm **level** surface. If the surface is not level, malfunctioning and consequent damage could result.

The lamp shade is packed separately for transport. With the rectangular hole uppermost slide the lamp shade on to the metal bracket, inserting hook through the hole.



## HAND SETTING

Adjust the clock to the correct time by turning the hand set knob on the rear of the clock case in anti-clockwise direction only (See Fig.2.).

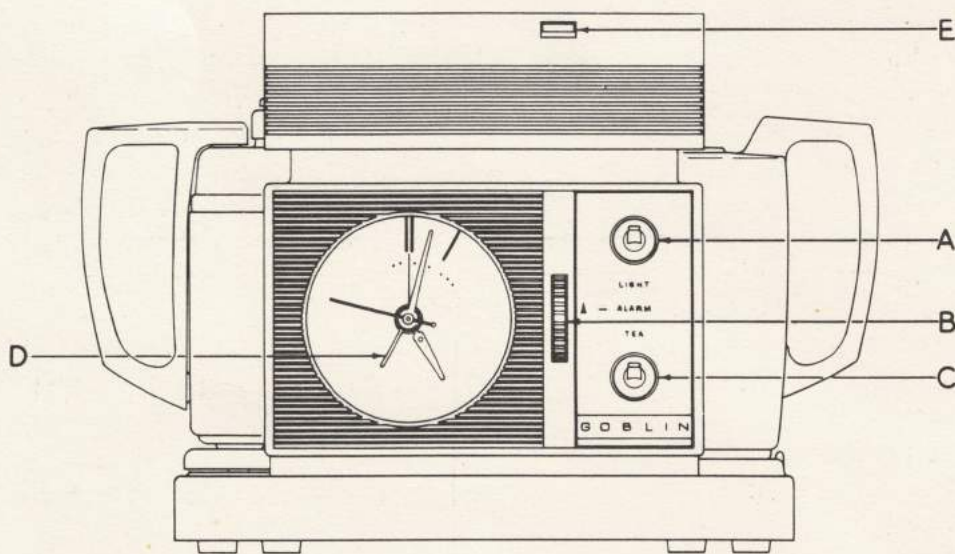


Figure 1.

Front elevation of set indicating:

- |                          |                   |
|--------------------------|-------------------|
| a) Light Switch          | d) Alarm hand     |
| b) Alarm set thumb wheel | e) Lampshade hook |
| c) Tea switch            |                   |

## ALARM SETTING

Set the position of the alarm hand to the time which it is required by turning the knurled thumb wheel situated on the right hand side of the clock face in an upward direction.

**Do not set the alarm more than eleven hours ahead of the time required.**

(See Fig.1.).

## TO SET FOR MAKING TEA

Having completed the time set and alarm set, fill the kettle with water until it just touches the pointer inside the kettle rim when the kettle is level.

### WARNING

**If the kettle is overfilled there is a risk that boiling water may be ejected through the vent hole in the lid.**

Fit the lid in position and secure by pressing downwards and turning clockwise until tight.

The kettle must under no circumstances whatsoever be connected to the electricity supply direct but must only be used with the TEASMADE.

Put the required amount of tea in the teapot and place on the teapot stand, see Fig.2.

Place the kettle on the platform with the kettle socket to the rear, then insert the kettle connector. Avoid twisting or restricting the **free movement** of the cable.

NOTE: A safety device is fitted to the teapot stand. If the teapot is not placed in position it causes the buzzer to sound immediately the tea switch is placed in the downward or operating position.

When positioning the kettle and teapot make sure the movement of the tube is not restricted and that the kettle platform also has freedom of movement. Finally, place tea switch and light switch in the down position. (See Fig.1).

When the tea is made and the alarm sounds, return the tea switch to the up position. If the light is not required return the light switch to the up position also.

If you prefer processed **instant** coffee, it can be made in exactly the same way.

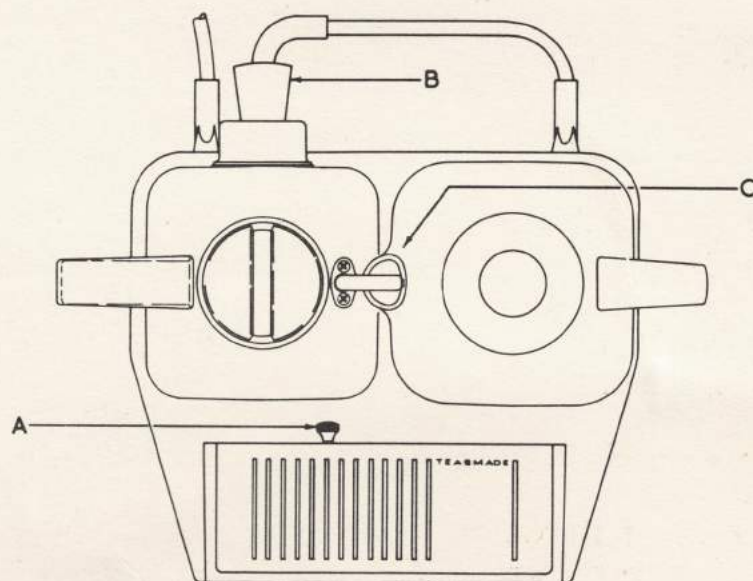


Figure 2. Top Plan indicating:

- a) Hand set knob    b) Kettle connector    c) Position of tube and teapot



## **USE OF ALARM ONLY**

For use as an alarm only do not fill the kettle but plug the connector in and place the teapot in position. Set the alarm a quarter of an hour later than the time required. i.e. If you want the alarm to sound at 7 o'clock, set the alarm hand at quarter past seven and place the tea switch in the down position.

To silence the alarm, return to the up position.

When used as an alarm only the light will not switch on automatically but can be used as required.

## **USE OF LIGHT ONLY**

When the TEASMADE has been set for automatic tea making the light can be used if required by placing the tea switch in the up position.

## **IMPORTANT**

1. Do not forget to place the teapot in position when setting the TEASMADE for operation.
2. Do not set the alarm to operate more than eleven hours ahead of the time required as the movement is of the 12 hour alarm type.
3. Always ensure that the movement of the kettle and platform is not restricted. Check that the kettle is in the correct position and that the connector cable is not twisted.
4. The TEASMADE is designed to use a 40 watt S.B.C. candle lamp.  
Replacing with a larger lamp or higher wattage could cause damage to the lamp shade.  
To replace lamp lift shade up to clear retaining hook and pull forward. Fit new lamp and replace lamp shade.
5. This TEASMADE must not be stood in a tray when in use.

## **CARE AND MAINTENANCE**

To maintain the polished appearance of the kettle use a damp cloth followed by polishing with a dry soft cloth.

To maintain your kettle in efficient working order occasional de-furring may be required particularly if you live in a hard water area. De-furring agents can be obtained from hardware stores and chemists and should be applied to the spout tube as well as to the kettle.

"Should your Teasmade require servicing, contact should be made initially with our Service Department at Leatherhead or one of our Branches. Advice will then be given on what action can be taken."

In all communications please quote MODEL and SERIAL NUMBER ON THE RATING PLATE.

If it is found necessary for the TEASMADE to be returned, it should be carefully packed and sent carriage paid.

It is suggested that the polystyrene pack included with this appliance be retained for future use whether it be for moving or for returning the TEASMADE for service.

In accordance with the Company's policy of continued development and improvement, we reserve the right to modify the design without prior notice.

"TEASMADE" is a registered trade mark and the design embodies various patents.

**GOBLIN ELECTRIC APPLIANCES LTD.**

**LEATHERHEAD SURREY**

**Telephone: Ashted 76121**

