

**Instructions for using your**



**TEASMADE MODEL 850K**

Please retain for future reference

**Please read these instructions carefully. They have been prepared to help you to obtain the best results from your Goblin TEASMADE. When not in use or during maintenance always switch off and remove plug from supply socket.**

This appliance has been designed primarily as a tea maker using loose tea or tea bags. It can also be used as a coffee maker using instant coffee or coffee bags.

### **PREPARATION FOR USE**

**Connecting to supply:** Check that the supply voltage details given on the rating plate (located on rear face of control panel) are in accordance with your electricity supply.

#### **IMPORTANT**

The wires in this mains lead are coloured in accordance with the following code:—

Green and Yellow—Earth      Blue—Neutral      Brown—Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:—

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the earth symbol  $\perp$  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

#### **WARNING: THIS APPLIANCE MUST BE EARTHED**

Each wire must be properly connected to the appropriate terminal pin of a suitable three-pin plug and the outer sheath of the mains lead securely retained by the anchorage arrangement of the plug. In case of doubt have this undertaken by a qualified electrician as Goblin (BVC) Limited do not regard the repair of faults on a mains plug connection as part of the guarantee offered on this product.

It is essential that the TEASMADE is operated on a firm **level** surface. If the surface is not level, malfunctioning and consequent damage could result.

**This TEASMADE must not be stood in a tray when in use.**

### **PREPARATION FOR MAKING TEA**

Fill the kettle with water until it just touches the pointer inside the kettle rim when the kettle is level.

**WARNING; If the kettle is overfilled there is a risk that boiling water may be ejected through the vent hole in the lid.**

Fit the lid in position and secure by pressing downwards and turning clockwise until tight.

The kettle must in no circumstances whatever be connected to the electricity supply direct but must only be used with the TEASMADE.

Place the kettle on the platform with the kettle socket to the rear, then insert the kettle connector. Avoid twisting or restricting the **free movement** of the cable (Fig 2).



Put the required amount of tea in the teapot and place the spout of the teapot under the tube of the kettle (see Fig 2). When positioning the teapot make sure the movement of the tube is not restricted and that the hinged kettle platform also has freedom of movement.

**NOTE** A safety device is fitted to the teapot stand. If the teapot is not placed in the correct position it causes the buzzer to sound immediately the appliance is switched on.

**MAKING TEA.** Place tea switch in the 'ON' position (neon will glow to show that the current is on) approximately 12 minutes before tea is required, (see Fig 1). When the tea is made and the buzzer sounds, return the switch to the 'OFF' position (neon will cease to glow).

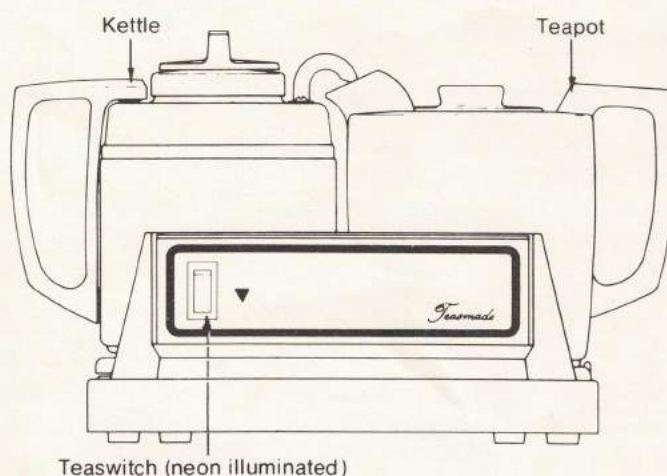


Figure 1

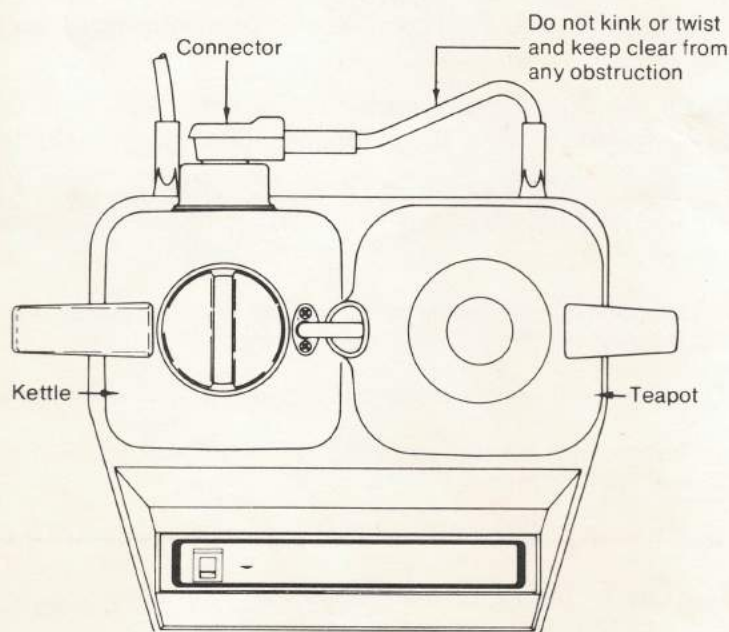


Figure 2

NOTE When water transfer has taken place the kettle will still contain some water usually to a level just covering the kettle element and the teapot will not be full to the brim. It does however contain sufficient tea/coffee for four cups. The appliance is set in this manner to avoid accidental spillage from the teapot when pouring.

After your tea or coffee has been consumed remember to remove the kettle and teapot from the TEASMADE to wash them out so that the appliance is ready to prepare for use again. **DO NOT IMMERSE THE KETTLE IN WATER.**

### IMPORTANT REMINDERS

- 1 Always ensure that the movement of the kettle and tilting platform is not restricted. Check that the kettle and teapot are in the correct position.
- 2 Ensure that the kettle lid is securely fitted.
- 3 If liquids are accidentally spilt on or adjacent to the TEASMADE, **disconnect from supply** and wipe dry with cloth.

### CARE AND MAINTENANCE OF YOUR TEASMADE

Your TEASMADE is manufactured from high-quality materials and should require the minimum of maintenance.

Occasionally however to keep your TEASMADE looking bright and new, wipe over with a slightly damp cloth, but be sure to disconnect from the mains supply before doing this. Do *not* use an abrasive cleaner. The kettle may be polished using a clean soft dry cloth.

To maintain your kettle in efficient working order occasional de-furring may be required particularly if you live in a hard water area. De-furring agents can be obtained from hardware stores and chemists and should be applied to the spout as well as to the kettle. If kettle spout is allowed to fur up, boiling water may be ejected through vent hole in lid.

Should your TEASMADE require servicing, contact Goblin (BVC) Limited to arrange for a service visit or return the TEASMADE to the nearest Goblin Service Department ensuring that it is well packed and therefore unlikely to be damaged during transit.

It is suggested that the polystyrene pack in which this appliance is supplied be retained as this packaging is ideal for returning the TEASMADE for service, should it be required.

In ALL communications please quote the model and serial number which appears on the rating plate.

*In accordance with the Company's policy of continued development and improvement we reserve the right to modify the design without prior notice.*

*'TEASMADE' is a registered trade mark and the design embodies various patents.*

*HOTELS ONLY: 'Instructions for use' cards for clients rooms are available on request from the Service Manager at address below.*

---

**GOBLIN (B.V.C.) LIMITED** A MEMBER OF THE BSR GROUP  
LEATHERHEAD, SURREY KT22 8TZ  
Telephone Ashted 76121  
Telex 28134

