

**Instructions for using your**



**TEASMADE MODEL 860**

**Please retain for future reference**

**Please read these instructions carefully. They have been prepared to help you to obtain the best results from your Goblin TEASMADE. During maintenance always remove plug from supply socket.**

This appliance has been designed primarily as a tea maker using loose tea or tea bags. It can also be used as a coffee maker using instant coffee or coffee bags with equal success. It is not however recommended that coffee beans are used.

## **PREPARATION FOR USE**


**Connecting to supply:** Check that the supply voltage details given on the rating plate (located in teapot alcove at rear of clock housing) are in accordance with your electricity supply.

### **IMPORTANT**

The wires in this mains lead are coloured in accordance with the following code:—

Green and Yellow—Earth      Blue—Neutral      Brown—Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:—

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

### **WARNING: THIS APPLIANCE MUST BE EARTHED**

Each wire must be properly connected to the appropriate terminal pin of a suitable three-pin plug and the outer sheath of the mains lead securely retained by the anchorage arrangement of the plug. In case of doubt have this undertaken by a qualified electrician as Goblin (BVC) Limited do not regard the repair of faults on a mains plug connection as part of the guarantee offered on this product.

Plug into the supply and the clock will start automatically. To enable you to check, an indicator situated immediately below the 12 o'clock mark on the dial (see Fig 1) can be seen to rotate when the clock is running.

To ensure reliable timekeeping the TEASMADE should be connected to a supply point which is not subject to disconnection.

The TEASMADE must be operated on a firm level surface to avoid the possibility of hazardous operation.

### **Clock setting**

**Time:** Adjust the clock to the correct time by rotating the hand set knob located at the rear in the kettle alcove (see Fig 2) in an anticlockwise direction when viewed from the rear.

**Alarm:** Set the position of the alarm hand to the time at which tea is required by moving the alarm set thumb wheel at the left of the clock dial, in a downward direction (see Fig 1). Do not select an 'AUTO' function (i.e. press down 'AUTO' key of switch for tea/coffee making or alarm call) more than eleven hours before the time you require to be awakened.

**Filling kettle with water:** Fill the kettle with water until it is level with the bottom edge of bracket inside the kettle when the kettle is supported on a level



surface. Do not overfill. Place lid over lid aperture of kettle and rotate in a clockwise direction to a maximum to seal. If kettle lid is not at the maximum clockwise rotation, seal may not be good enough for water transfer to take place.

**WARNING—BOILING WATER MAY BE EJECTED THROUGH THE VENT HOLE IN THE KETTLE BODY IF THE KETTLE IS OVERFILLED.**

Place the kettle on the platform so that kettle feet locate in slots in platform and kettle spout points towards the central pillar. Slide kettle towards central pillar until element is fully engaged with socket connector (see Fig 2).

**THE KETTLE MUST ONLY BE USED WITH THE TEASMADE AND MUST UNDER NO CIRCUMSTANCES WHATEVER BE CONNECTED TO THE ELECTRICITY SUPPLY DIRECT.**

Always remove kettle from TEASMADE when filling it with water to avoid splashing appliance. Before using your TEASMADE to make tea or coffee it is recommended that it is operated once or twice with only water in the kettle.

Put the required amount of tea or tea bags, coffee or coffee bags in the teapot and replace lid (see Fig 2). Place teapot in alcove so that it locates over the sloping face on the platform and rests against the central pillar (see Fig 2).

**NOTE:** If the teapot is not placed in position or positioned incorrectly, it will

cause the alarm to sound immediately the 'AUTO' or 'TEA NOW' key of switch is depressed.


Press down the 'AUTO' key of switch (see Fig 1). Your TEASMADE is now ready for use and no further adjustment is necessary.

### USING YOUR TEASMADE

If your TEASMADE has been prepared, as detailed above, transfer of water to teapot will occur at the alarm set time. On completion of water transfer the heating element switches off, the alarm sounds and the lights come on. Press down 'LIGHT' or 'CLOCK ONLY' key of switch to silence the alarm. Allow a minute or so to brew, and your pot of tea or coffee will be ready for serving.

Providing the preparation procedure has been followed, tea or coffee can be made at any time by pressing down the 'TEA NOW' key of switch. This energises the heating element immediately and enables a pot of tea or coffee to be ready for serving in about twelve minutes. When the tea or coffee is made, the alarm will sound. Press down 'CLOCK ONLY' or 'LIGHT' key of switch to silence the alarm.

**NOTE:** When water transfer has taken place the kettle will still contain some water usually to a level just covering the kettle element and the teapot will not

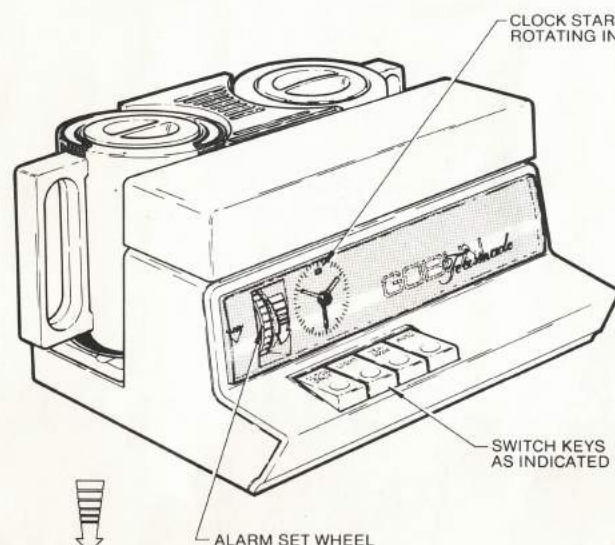

ARROW HEADS IN THIS FORM INDICATE DIRECTION OF ROTATION OR MOVEMENT FOR AN OPERATION DESCRIBED IN THE INSTRUCTIONS

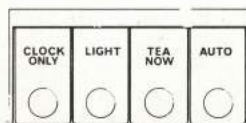


Fig 1

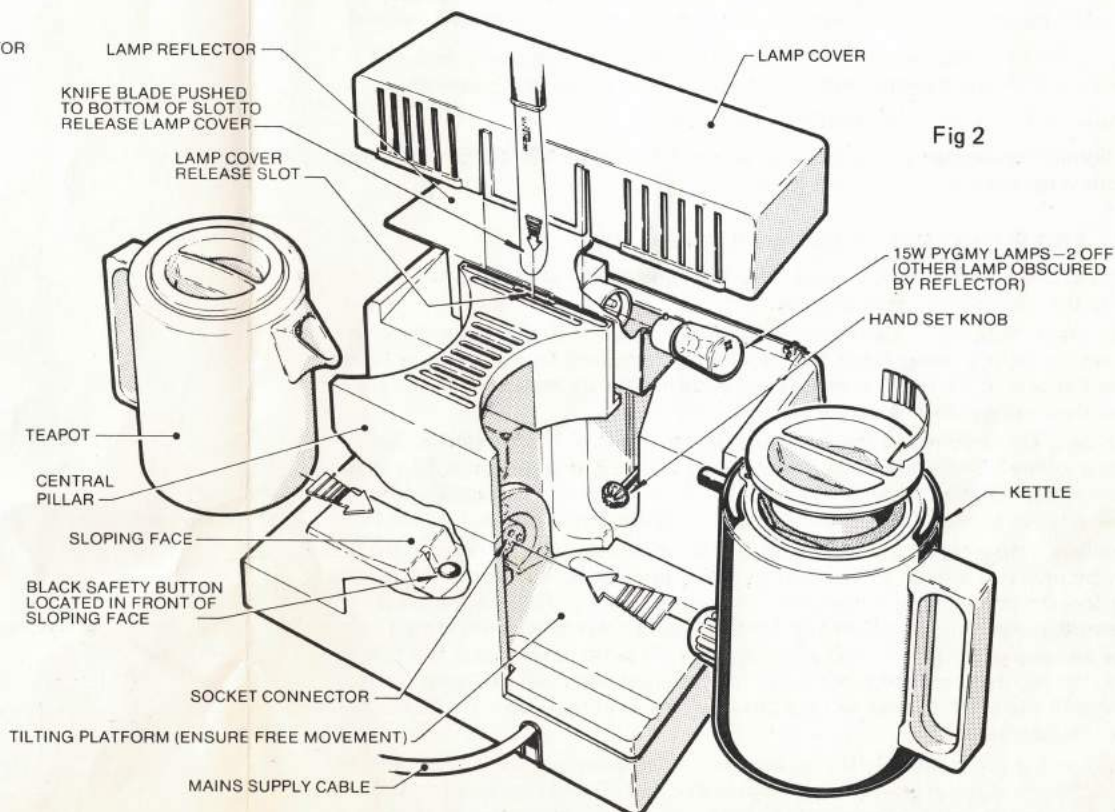


Fig 2



surface. Do not overfill. Place lid over lid aperture of kettle and rotate in a clockwise direction to a maximum to seal. If kettle lid is not at the maximum clockwise rotation, seal may not be good enough for water transfer to take place.

**WARNING—BOILING WATER MAY BE EJECTED THROUGH THE VENT HOLE IN THE KETTLE BODY IF THE KETTLE IS OVERFILLED.**

Place the kettle on the platform so that kettle feet locate in slots in platform and kettle spout points towards the central pillar. Slide kettle towards central pillar until element is fully engaged with socket connector (see Fig 2).

**THE KETTLE MUST ONLY BE USED WITH THE TEASMADE AND MUST UNDER NO CIRCUMSTANCES WHATEVER BE CONNECTED TO THE ELECTRICITY SUPPLY DIRECT.**

Always remove kettle from TEASMADE when filling it with water to avoid splashing appliance. Before using your TEASMADE to make tea or coffee it is recommended that it is operated once or twice with only water in the kettle.

Put the required amount of tea or tea bags, coffee or coffee bags in the teapot and replace lid (see Fig 2). Place teapot in alcove so that it locates over the sloping face on the platform and rests against the central pillar (see Fig 2).

**NOTE:** If the teapot is not placed in position or positioned incorrectly, it will

cause the alarm to sound immediately the 'AUTO' or 'TEA NOW' key of switch is depressed.


Press down the 'AUTO' key of switch (see Fig 1). Your TEASMADE is now ready for use and no further adjustment is necessary.

### USING YOUR TEASMADE

If your TEASMADE has been prepared, as detailed above, transfer of water to teapot will occur at the alarm set time. On completion of water transfer the heating element switches off, the alarm sounds and the lights come on. Press down 'LIGHT' or 'CLOCK ONLY' key of switch to silence the alarm. Allow a minute or so to brew, and your pot of tea or coffee will be ready for serving.

Providing the preparation procedure has been followed, tea or coffee can be made at any time by pressing down the 'TEA NOW' key of switch. This energises the heating element immediately and enables a pot of tea or coffee to be ready for serving in about twelve minutes. When the tea or coffee is made, the alarm will sound. Press down 'CLOCK ONLY' or 'LIGHT' key of switch to silence the alarm.

**NOTE:** When water transfer has taken place the kettle will still contain some water usually to a level just covering the kettle element and the teapot will not

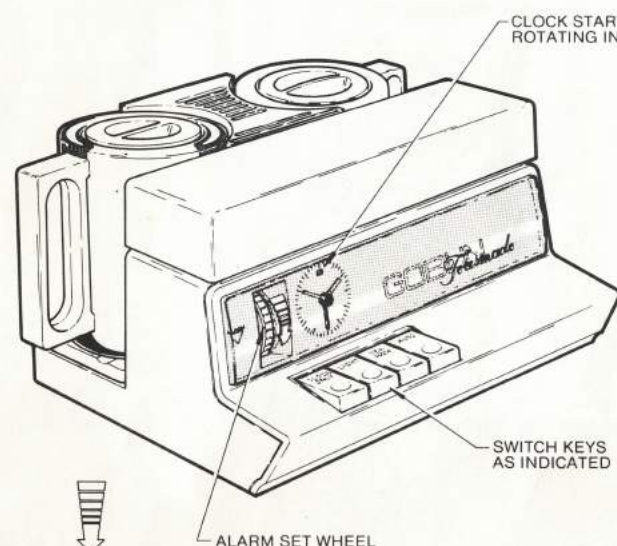

ARROW HEADS IN THIS FORM INDICATE DIRECTION OF ROTATION OR MOVEMENT FOR AN OPERATION DESCRIBED IN THE INSTRUCTIONS

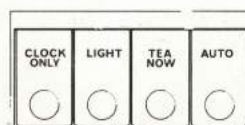


Fig 1

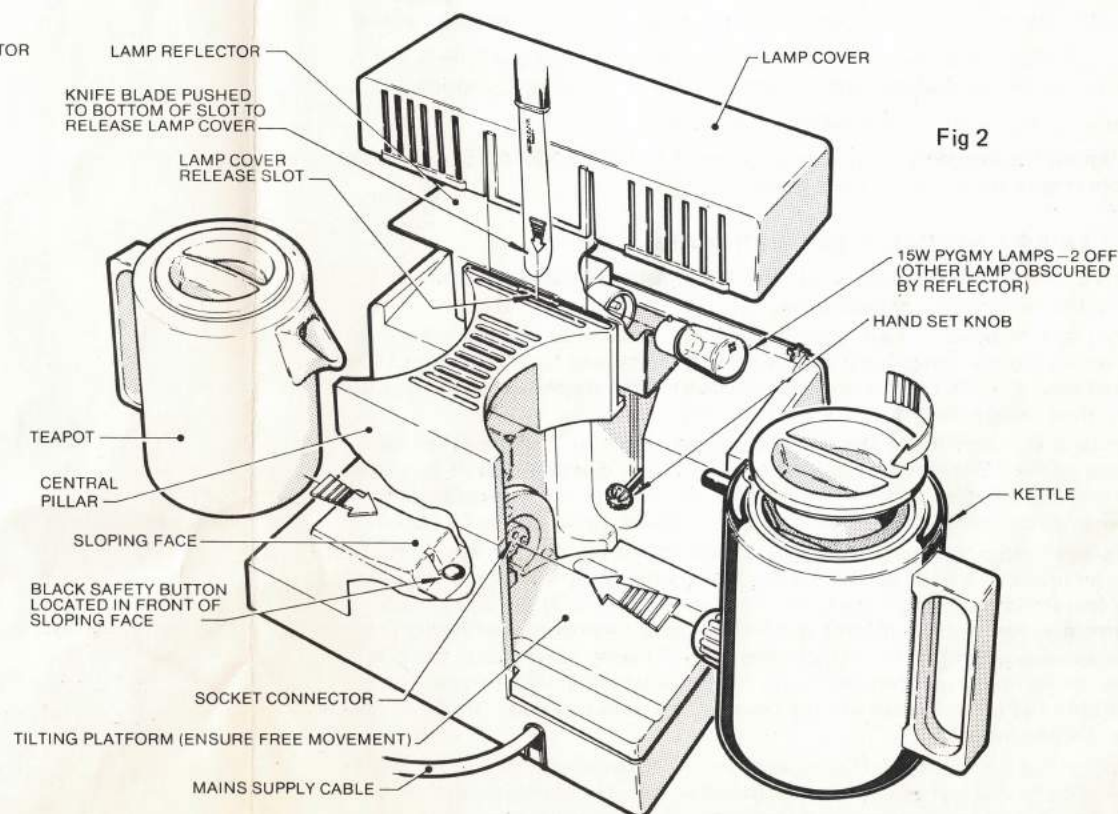


Fig 2



be full to the brim. It does however contain sufficient tea/coffee for four cups. The appliance is set in this manner to avoid accidental spillage from teapot when pouring.

After your tea/coffee has been consumed remember to remove the kettle and teapot from your TEASMADE. Wash out the teapot and empty remaining water from kettle; this helps to prevent scale building up in kettle. **DO NOT IMMERSE KETTLE IN WATER.** Your TEASMADE is then ready to prepare to use again (see earlier instructions for guidance).

**Use of clock alarm only:** Your TEASMADE can be used as an alarm only. To use in this manner proceed as follows. Place the teapot in position (see Fig 2) and press down 'AUTO' key of switch. The alarm will sound approximately twelve minutes in advance of the time set and this should be taken into account when setting the alarm. The kettle may be left in position provided it is empty.

**Use as a bedside light:** The light may be switched on at any time by pressing down 'LIGHT' key of switch (see Fig 1). To switch off light depress the appropriate key to return to the function required ie 'AUTO' or 'CLOCK ONLY'.

### IMPORTANT REMINDERS

1. The TEASMADE clock movement is of the 12-hour type. Do not select 'AUTO' more than eleven hours before the time you require to be awakened.
2. Always ensure that the movement of the kettle and tilting platform is not restricted. Check that the kettle and teapot are in the correct position.
3. Ensure that the kettle lid is securely fastened.
4. If liquids are accidentally spilt on or adjacent to the TEASMADE, **disconnect from supply** and wipe dry with cloth.

### CARE AND MAINTENANCE OF YOUR TEASMADE

Your TEASMADE is manufactured from high-quality materials and should require the minimum of maintenance.

Occasionally however to keep your TEASMADE looking bright and new, wipe over with a slightly damp cloth, but be sure to disconnect from the mains supply before doing this. Do *not* use an abrasive cleaner. The stainless steel kettle may be polished using a clean soft dry cloth.

It can be anticipated that, after some use, replacement of the lamps may be necessary. The TEASMADE incorporates two 15W b.c. pygmy lamps (see label on top of the reflector under lamp cover for details). Do not replace these with larger lamps or lamps of higher wattage as this could damage your TEASMADE.

To replace lamp disconnect TEASMADE from mains supply and remove the lamp cover by inserting a small screwdriver or knife blade down the slot in the central pillar located immediately behind the lamp cover (see Fig 2). Ease the blade towards the rear of the appliance and lift the cover clear of the reflector. The lamps are now accessible for replacement. To refit lamp cover locate the two ribs at the rear between the ribs on the central pillar and push the lamp cover down until the catch locates and the cover is locked in position. The TEASMADE is again ready for use.

To maintain your kettle in efficient working order occasional de-furring may be required particularly if you live in a hard water area. De-furring agents can be obtained from hardware stores and chemists and should be applied to the spout as well as to the kettle. If kettle spout is allowed to fur up, boiling water may



be ejected through vent hole in kettle body.

Should your TEASMADE require servicing, contact Goblin (BVC) Limited to arrange for a service visit or return the TEASMADE to the nearest Goblin Service Department ensuring that it is well packed and therefore unlikely to be damaged during transit.

It is suggested that the polystyrene pack in which this appliance is supplied be retained as this packaging is ideal for returning the TEASMADE for service, should it be required.

In ALL communications please quote the model and serial number which appears on the rating plate (situated in the teapot alcove).

*In accordance with the Company's policy of continued development and improvement we reserve the right to modify the design without prior notice.*

*'TEASMADE' is a registered trade mark and the design embodies various patents.*

---

**GOBLIN (B.V.C.) LIMITED** A MEMBER OF THE BSR GROUP  
LEATHERHEAD, SURREY KT22 8TZ  
Telephone Ashted 76121  
Telex 28134

