

Instructions for using your



TEASMADE MODEL 855W

Please retain for future reference

Please read these instructions carefully. They have been prepared to help you to obtain the best results from your Goblin TEASMADE. During maintenance always remove plug from supply socket.

This appliance has been designed primarily as a tea maker using loose tea or tea bags. It can also be used as a coffee maker using instant coffee or coffee bags.

This appliance is provided with a tray on which to place your crockery. The tray is designed to locate with the front of your TEASMADE.

This appliance complies with the limits for radio interference specified in BS 800.

PREPARATION FOR USE

Connecting to supply: Check that the supply voltage details given on the rating plate (located on rear of clock housing) are in accordance with your electricity supply.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:—
Green and Yellow—Earth Blue—Neutral Brown—Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:—

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the earth symbol \perp or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

WARNING: THIS APPLIANCE MUST BE EARTHED

Each wire must be properly connected to the appropriate terminal pin of a suitable three-pin plug and the outer sheath of the mains lead securely retained by the anchorage arrangement of the plug. In case of doubt have this undertaken by a qualified electrician as Goblin (BVC) Limited do not regard the repair of faults on a mains plug connection as part of the guarantee offered on this product.

Plug into the supply and the clock will start automatically. To enable you to check, an indicator near to the 9 o'clock mark on the dial (see Fig 1) can be seen to rotate when the clock is running.

To ensure reliable timekeeping the TEASMADE should be connected to a supply point which is not subject to disconnection.

Position the TEASMADE on a firm level surface.

Clock setting

Time: Adjust the clock to the correct time by rotating the hand set knob located at the rear of the clock housing (see Fig 1) in an anticlockwise direction when viewed from the rear.

Alarm: Set the position of the alarm hand to the time at which tea is required by moving the alarm set thumb wheel below the clock dial, from left to right (see Fig 1). Do not select 'AUTO' on rotary switch for tea/coffee making or alarm call more than eleven hours before the time you require to be awakened.

Filling kettle with water: Fill the kettle with water to water level bracket inside the kettle when the kettle is supported on a level surface. Do not overfill. Place lid over lid aperture of kettle and rotate clockwise until tight. If kettle lid is not a tight fit, seal may not be good enough for water transfer to take place.

WARNING—BOILING WATER MAY BE EJECTED THROUGH THE VENT HOLE IN THE KETTLE LID IF THE KETTLE IS OVERFILLED.

Place the kettle on the platform with the kettle socket to the rear, then insert kettle connector. Avoid twisting or restricting the **free movement** of the cable.

THE KETTLE MUST ONLY BE USED WITH THE TEASMADE AND MUST UNDER NO CIRCUMSTANCES WHATEVER BE CONNECTED TO THE ELECTRICITY SUPPLY DIRECT.

Always remove kettle from TEASMADE when filling it with water to avoid splashing appliance. Before using your TEASMADE to make tea or coffee it is recommended that it is operated once or twice with only water in the kettle.

Put the required amount of tea or tea bags, coffee or coffee bags in the teapot and replace lid (see Fig 2). Place teapot on teapot stand so that spout locates under kettle spout (see Fig 2).

Select 'AUTO' on rotary switch (see Fig 3).

NOTE: If the teapot is not placed in position or positioned incorrectly, it will cause the alarm to sound immediately 'AUTO' is selected.

Your TEASMADE is now ready for use and no further adjustment is necessary.

USING YOUR TEASMADE

If your TEASMADE has been prepared, as detailed above, transfer of water to teapot will occur at the alarm set time. On completion of water transfer the heating element switches off, the alarm sounds and the light comes on. Select 'LIGHT' or

'OFF' on rotary switch to silence the alarm. Allow a minute or so to brew, and your pot of tea or coffee will be ready for serving.

Providing the preparation procedure has been followed, tea or coffee can be made at any time by selecting 'TEA NOW' on rotary switch. This energises the heating element immediately and enables a pot of tea or coffee to be ready for serving in about twelve minutes. When the tea or coffee is made, the alarm will sound. Select 'CLOCK ONLY' or 'LIGHT' on rotary switch to silence the alarm.

NOTE: When water transfer has taken place the kettle will still contain some water usually to a level just covering the kettle element and the teapot will not be full to the brim. It does however contain sufficient tea/coffee for four cups. The appliance is set in this manner to avoid accidental spillage from teapot when pouring.

After your tea/coffee has been consumed remember to wash out the teapot. Your TEASMADE is then ready to prepare to use again (see earlier instructions for guidance).

Use of clock alarm only: Your TEASMADE can be used as an alarm only. To use in this manner proceed as follows. Place the teapot in position (see Fig 2) and select 'AUTO' on rotary switch. The alarm will sound approximately twelve minutes in advance of the time set and this should be taken into account when setting the alarm. The kettle may be left in position provided it is empty.

Use as a bedside light: The light may be switched on at any time by selecting 'LIGHT' on rotary switch. To switch off light rotate switch knob to return to the function required ie 'AUTO' or 'OFF'.

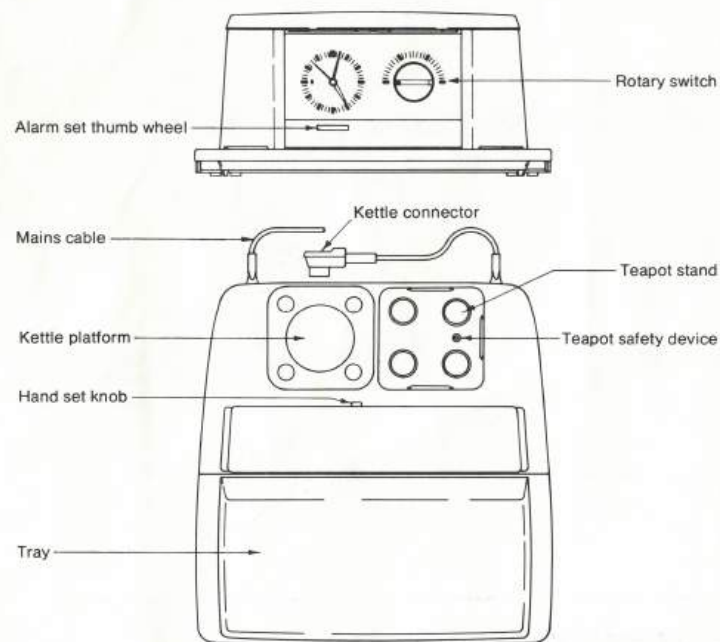 


Figure 1

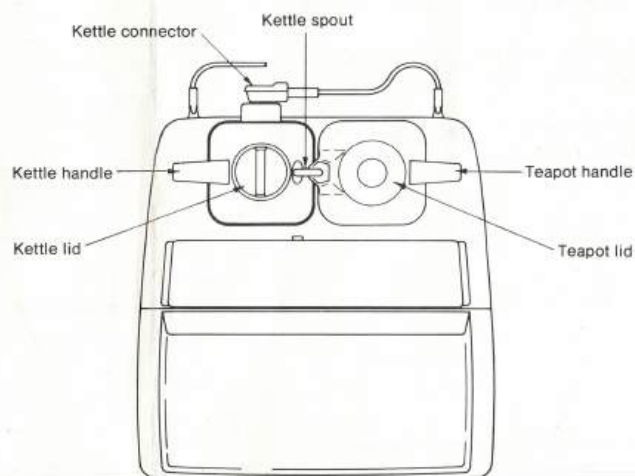 


Figure 2

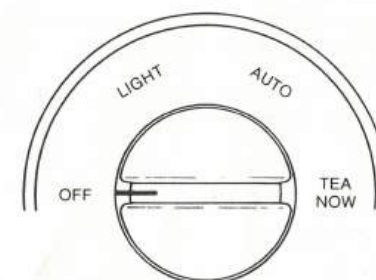 


Figure 3

IMPORTANT REMINDERS

1. The TEASMADE clock movement is of the 12-hour type. Do not select 'AUTO' more than eleven hours before the time you require to be awakened.
2. Always ensure that the movement of the kettle and tilting platform is not restricted. Check that the kettle and teapot are in the correct position and that connector cable is not twisted.
3. Ensure that the kettle lid is securely fastened.
4. If liquids are accidentally spilt on or adjacent to the TEASMADE, **disconnect from supply** and wipe dry with cloth.

CARE AND MAINTENANCE OF YOUR TEASMADE

Your TEASMADE is manufactured from high-quality materials and should require the minimum of maintenance.

Occasionally however to keep your TEASMADE looking bright and new, wipe over with a slightly damp cloth, but be sure to disconnect from the mains supply before doing this. Do *not* use an abrasive cleaner. The kettle may be polished using a clean soft dry cloth.

It can be expected that after some use replacement of the lamps may be necessary. The TEASMADE incorporates two 15 watt BC Pygmy lamps for illumination. Do not replace with larger lamp or lamp of higher voltage as this could damage your TEASMADE.

To replace lamp disconnect TEASMADE from mains supply and remove louvred cover(s) at rear of clock housing by releasing the centre slotted screw(s). Change lamp(s) and refit cover(s).

To maintain your kettle in efficient working order occasional de-furring may be required particularly if you live in a hard water area. De-furring agents can be obtained from hardware stores and chemists and should be applied to the spout as well as to the kettle. If kettle spout is allowed to fur up, boiling water may be ejected through vent hole in kettle lid.

Should your TEASMADE require servicing, contact Goblin (BVC) Limited to arrange for a service visit or return the TEASMADE to the nearest Goblin Service Department ensuring that it is well packed and therefore unlikely to be damaged during transit.

It is suggested that the polystyrene pack in which this appliance is supplied be retained as this packaging is ideal for returning the TEASMADE for service should it be required.

In ALL communications please quote the model and serial number which appears on the rating plate (situated at the rear of the clock housing).

In accordance with the Company's policy of continued development and improvement we reserve the right to modify the design without prior notice.

'TEASMADE' is a registered trade mark and the design embodies various patents.

HOTELS ONLY: 'Instructions for use' cards for clients rooms are available on request from the Service Manager at address on back page.

YOUR GOBLIN SERVICE DEPOTS

If you require service or spares for your Goblin appliance, please contact your nearest Service Depot. These are situated at:

LEATHERHEAD, Surrey

Goblin Works, Ermyn Way
Leatherhead KT22 8TZ
Telephone: Ashtead 76121

BELFAST N.I.

399-401 Castlereagh Road
Belfast BT5 0ND
Telephone: 0232 56294

BIRMINGHAM

P.O. Box 184, Albion Works, Albion Street
Birmingham B1 3DL
Telephone: 021-236 8292

KEIGHLEY

P.O. Box 12, Newton House, Cavendish Street
Keighley, West Yorkshire BD21 3RR
Telephone: 0535 607681

GOBLIN (B.V.C.) LIMITED A MEMBER OF THE BSR GROUP
LEATHERHEAD, SURREY KT22 8TZ
Telephone Ashtead 76121
Telex 28134

