


Model 7107

All about your
Russell
Hobbs
Chelsea
Teamaker


Instructions
Information

Clock

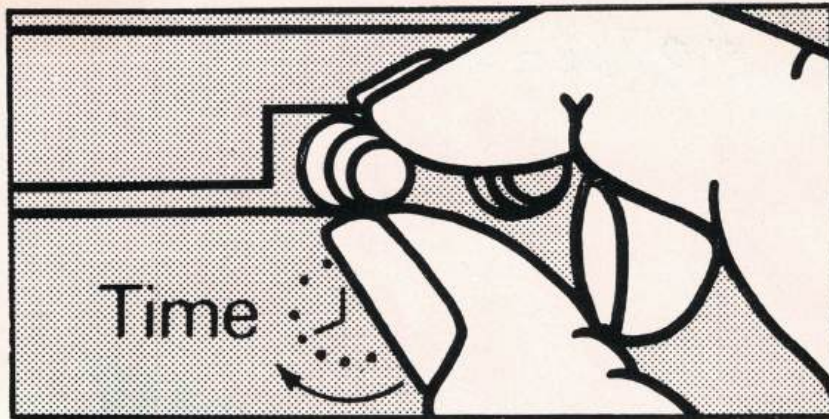


Set the time by turning this knob at the rear clockwise.

Alarm

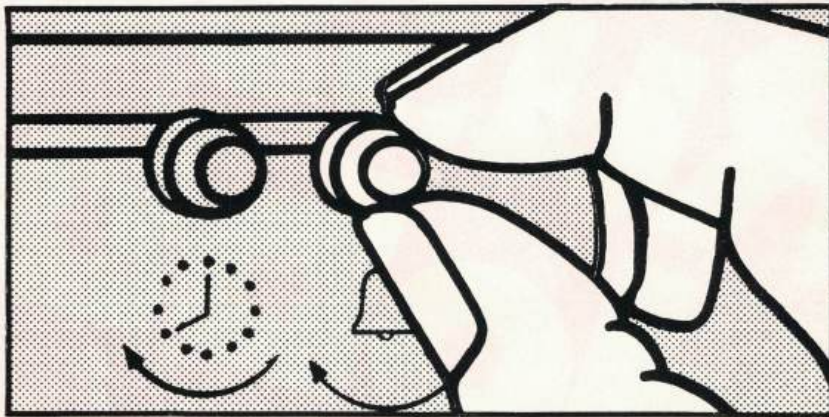

Set the alarm time by turning this knob at the rear clockwise. Each click is equivalent to $2\frac{1}{2}$ minutes.

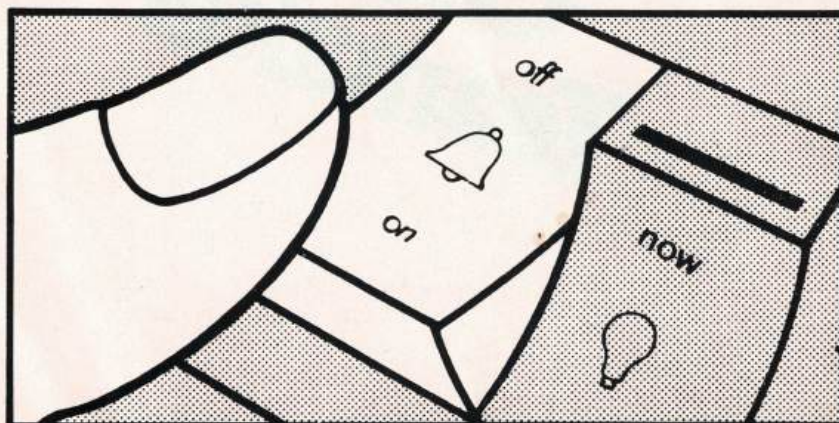


The alarm switch has two positions, OFF and ON.

The clock has a 12 hour movement. This means that the alarm will operate every 12 hours.

So switch off in the morning, and switch on before going to sleep.

Light

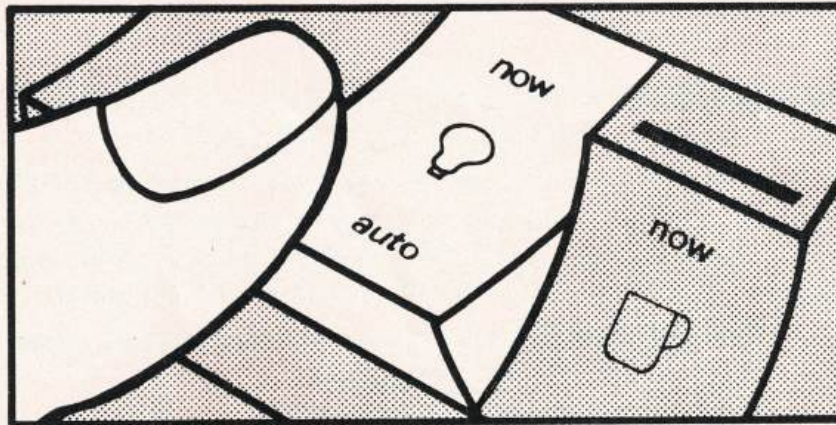


The light switch has three positions, NOW, OFF and AUTO. With the switch set to AUTO, the light will come on at the alarm time, and will stay on for about 45 minutes.

The central position is OFF, marked by the black bar visible on the top.

Press NOW for the light to come on.

The light itself has two positions. The lower position in which you receive it, is for background light. For brighter lighting, lift the light upwards from the ends with both hands.

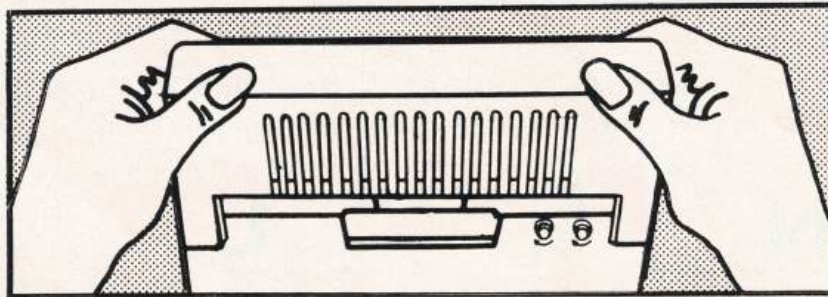

Preparing the teapot

1 The base of the teapot engages into a socket in the clock. Remove the teapot, always withdrawing it sideways away from the clock.

2 Take off the lid, remove the tea float and strainer cover.

3 Fill the teapot with cold water to the level marked, which is about 4 cups. Fill the pot at the tap—never when plugged into the clock. **WARNING, IF THE POT IS OVER-FILLED THERE IS A RISK THAT BOILING WATER MAY BE EJECTED.**

4 Slide the teapot back into the clock unit sideways making sure it completely engages into the socket.

5 Unclip the strainer cover from the tea float.



Loose Tea

Evenly distribute the tea leaves in the tea float. Use two level measures of tea leaves, since the extraction rate is very high. Adjust subsequently to suit, but do not use more than four measures of tea leaves as the strainer holes will block and prevent the tea from brewing. Replace the strainer cover, ensuring it is clipped into position.

Teabags

Place two teabags in the tea float, taking care that they do not overhang. DO NOT replace the strainer cover.

Ground Coffee

The teamaker can be used to make excellent coffee, using ground coffee or ground coffee bags. Follow the instructions for loose tea or teabags.


Instant Coffee

Do not use instant coffee in the teapot as it will froth out of the spout. Instead, use the tea float empty, and put the instant coffee in the cups, using the hot water when it is ready.

6 Float the tea float, with strainer cover, if fitted, on the surface of the water.

7 Refit the teapot lid.

Setting the teamaker

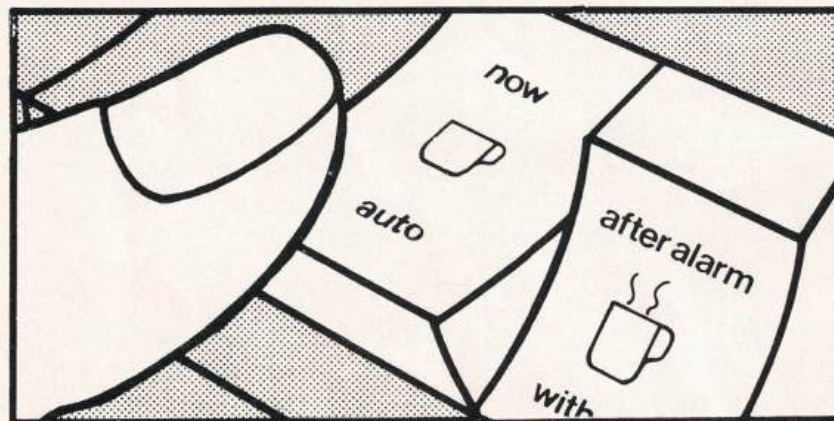

The left hand tea switch has three positions, NOW, OFF and AUTO.

Press NOW if you want tea immediately. The 'tea made' light (in the bottom right hand corner of the teapot) will glow when the tea is made. Allow to brew for a few minutes before serving.

Press AUTO if you want tea automatically in the morning.

The right hand tea switch enables you to select tea AFTER ALARM or WITH ALARM.

When set to AFTER ALARM, the teapot starts to make the tea at the alarm time selected. The 'tea made' light will glow when the tea is made. Allow to brew for a few minutes before serving.

When set to WITH ALARM, the teapot starts to make the tea before the alarm time selected. So it is made and brewed when you are awakened.

The Alarm, Light and Teamaking functions can all be selected independently or used together in any combination.

To make an all-automatic setting easy we have marked all the switches with a red line on the top.

When all the switches are pressed down, a continuous red line shows. This will give you alarm, light and tea ready all at the same time.

The black bars across the two centre switches show that they are OFF.

Remember, as the clock has a 12 hour movement automatic operation will take place every 12 hours if the switches are left in the AUTO position. So switch off in the morning after use and set before going to sleep.

Misuse

Don't switch on teapot without water inside.

However, if you do so inadvertently, a safety device will automatically prevent damage. This will reset automatically as the pot cools down.

Do not cool by filling with cold water.

If the tea float is in the pot with no water, the pot cannot switch on. So it is good practice to keep the tea float in the empty pot to prevent accidental switching on.

Care & Maintenance

IMPORTANT Disconnect from mains supply before cleaning the appliance or removing lampshade.

The outside of the clock unit can be cleaned by wiping with a damp cloth. Avoid abrasive cleaners which may scratch surfaces.

To clean the teapot, remove the tea float, empty the tea and wash the tea float and the strainer cover under a tap. Rinse the inside of the teapot and wipe with a cloth. Clean the outside with a damp cloth. Make sure the connector socket is kept absolutely dry.

NEVER IMMERSE THE TEAPOT IN WATER.

Tannin, a natural constituent found in tea, is a strong, but harmless staining agent. It can be found in most teapots, but should you wish to remove it, follow these instructions:

- 1** Fill the teapot to water level.
- 2** Add two teaspoons of household detergent, citric acid crystals or bicarbonate of soda.
- 3** Cover with lid and leave to soak for 12 or more hours.
- 4** The film or stains can be removed with cloth or brush and further rinsing will complete the process.

If you need to replace the lamp, **DISCONNECT FROM THE MAINS SUPPLY BEFORE REMOVING THE LAMP SHADE.**

The light is a 30 watt strip lamp, 221mm long.

DO NOT REPLACE WITH A HIGHER WATTAGE LAMP.

Remove the screw, lift the shade from the screw end and slide off.

Remove the lamp by holding one end and, pushing towards the opposite end, lift out.

Replacement is the reverse to the above.

NOTE As with most consumable components the strip lamp itself cannot be covered by our 12 month guarantee.


How the teapot works

The Chelsea Teamaker utilises a unique teamaking method that uses only one pot. It ensures the water is at its hottest when the tea is made.

A float containing the tea floats on the surface of the cold water. When the teapot is switched on, the water is heated (heating the pot at the same time).

When the water boils, it bubbles over the side of the tea float, beginning the infusion process and causing the tea float to sink.

As soon as the tea float sinks and touches the teapot bottom the floats' magnet automatically switches off the heating element.

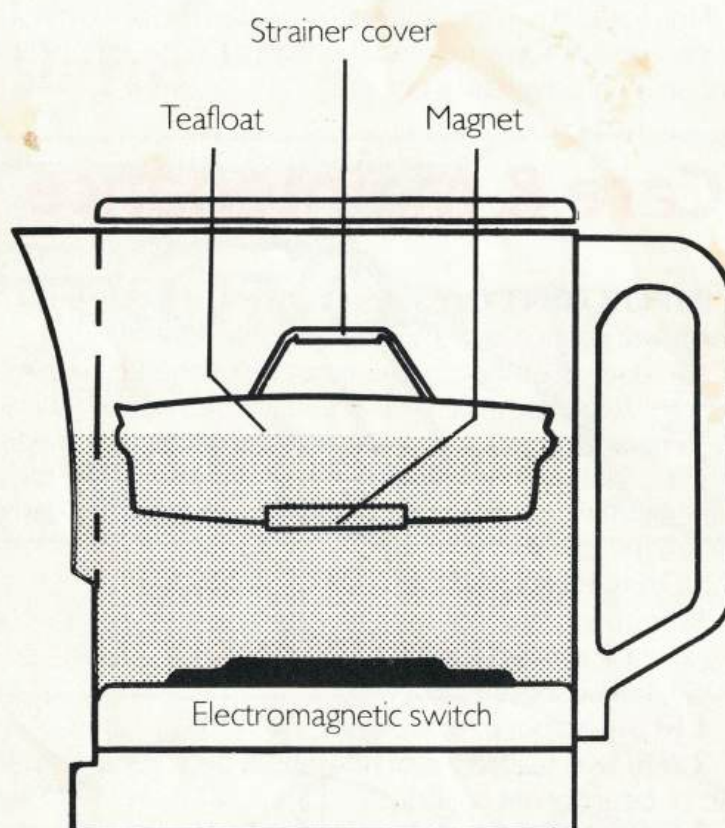

Safety in the home

- When using electrical appliances, basic safety precautions should always be followed.

- Read the instructions thoroughly before use. Save them for future reference.

- Disconnect from the mains supply when not in use, and before cleaning.

- To disconnect from the mains supply, first turn any appliance control to OFF. Switch off at the wall socket and remove the plug.

- Always ensure that connectors are fully pushed into place.

- Do not touch hot surfaces. Use handles or knobs. Allow to cool before putting on or taking off parts and before cleaning the appliance.

- Do not immerse lead, connector, plug or the appliance in water or other liquids. Damp leads, connectors and plugs can be dangerous and may damage the appliance and wall socket.

- Close supervision is necessary when any appliance is used near or by children.

- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest Authorised Service Agent for examination, repair or adjustment. Only genuine Russell Hobbs spares should be fitted.

- Do not use outdoors or in bathrooms.

- Do not let the lead touch hot surfaces; hang over the edge of a table or counter; lie where it can be pulled on by children, or tripped over accidentally; or become trapped under the appliance.

- Do not use the appliance for other than the intended use.

- Do not place on or near a hot gas or electric burner, or in a heated oven.

If your appliance does not work

Before contacting your Service Agent check:

- Is the appliance switched on?

- If there is a separate lead is it firmly in position?

- Is the plug in its socket, and any socket switch in the ON position?

- Does the fuse require replacing and is it the specified rating?

- Are internal plug connections secure and correctly made?

- Is the plug faulty?

Instruction summary

Although many combinations of alarm, light and tea are possible—manually or automatically—the most likely have been marked on the switches as follows:



A continuous red line gives an all automatic setting which will give you alarm, light and tea (with alarm), in the morning.



A black line only means all functions are off.

No line switches on the light and teapot straight-away.

WITHDRAW POT SIDEWAYS



**Unique
single pot
makes
delicious
hot tea
or coffee**

Keep this summary card by your Chelsea for easy reference.



Instruction summary

Prepare the teapot:

- Remove the pot sideways.
- Take off the lid and remove the tea float.
- Fill with water to water level.

WARNING If the pot is overfilled there is a risk that boiling water may be ejected.

- Slide the teapot back into the clock unit.

- **Tea and ground coffee:**

Put in the tea float. Don't replace the cover if using bags.

- **Instant coffee:**

Put in the cup. Use tea float empty, and the hot water when it is ready.

- Float the tea float on the water.

- Replace the teapot lid.

Set the switches (see over).

Neon glows when tea is ready.

