

Instructions for using your Goblin Radio Teasmade.

Instructions also apply to the 860 model.
The only difference is that the 870 has a radio.


MODEL 870

Please retain for future reference

Please read these instructions carefully. They have been prepared to help you to obtain the best results from your Goblin RADIO TEASMADE. During maintenance always remove plug from supply socket.

This appliance complies with the limits for Radio Interference specified in BS 800.

Connecting your Radio Teasmade to the supply

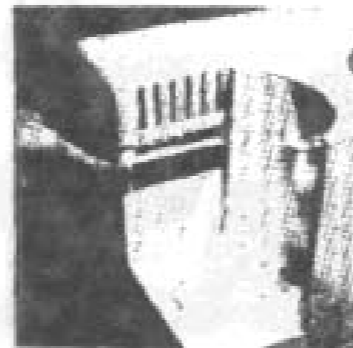

Check that the supply voltage details given on the rating plate are in accordance with your electricity supply.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:-

Green and Yellow – Earth Blue – Neutral Brown – Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:-

The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the earth symbol \perp or coloured green or green and yellow.

The wire that is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

WARNING: THIS APPLIANCE MUST BE EARTHED

Each wire must be properly connected to the appropriate terminal pin of a suitable three-pin plug and the outer sheath of the mains lead securely retained by the anchorage arrangement of the plug. In case of doubt have this undertaken by a qualified electrician as Goblin (BVC) Limited do not regard the repair of faults on a mains plug connection as part of the guarantee offered on this product.

If a 13A fused plug is used it is recommended that a 3 amp cartridge fuse be fitted.

How to use your Radio Teasmade

THE KEYBOARD SWITCHES

The keys of the 5-key switch are marked



Pressing down 'AUTO' key, programmes your 'RADIO TEASMADE' to automatically make tea/coffee, switch on light and sound buzzer or switch on radio at the alarm set time, if the instructions in the booklet are followed correctly.

Pressing down 'TEA NOW' key, switches on kettle and light and tea/coffee will be ready in about 12 minutes, if the instructions in this booklet are followed correctly.

Pressing down 'LIGHT' key, switches on light.

Pressing down 'CLOCK ONLY' key, cancels the operation selected by any of the other switch keys above leaving the clock running. This key resets when you lift your finger.

Pressing down 'BUZZER' key selects the buzzer as the alarm, pressing down 'BUZZER' key again resets switch key to raised position, in which case the radio is selected as the alarm.

The key of the single key switch is marked.



To switch on radio at any time press down 'RADIO ON OFF' key.

Pressing down 'RADIO ON OFF' key again resets switch key to raised position switching radio off.



The Clock

The clock starts immediately you plug the appliance into a supply socket. To enable you to check an indicator on the clock dial should rotate.

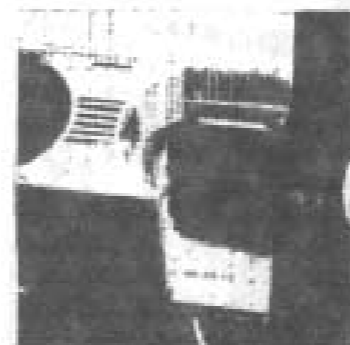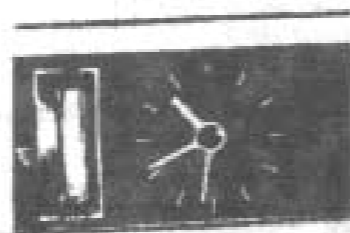


To adjust the clock to the correct time: Rotate the hand set knob in an anti-clockwise direction.

The Radio

To switch on the radio (for listening only NOT for alarm/teasmaking) press down 'RADIO ON OFF' switch key.

Select FM(VHF) or MW (medium wave) by moving slide selector switch to the right for FM or the left for MW.

Tune to the radio station of your choice, rotating the tuning knob clockwise moves

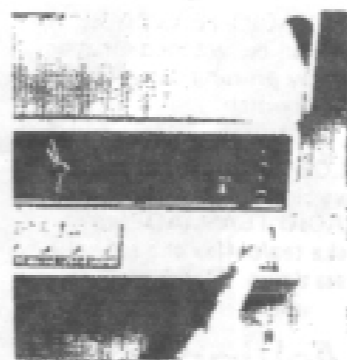

the station selector to the right and rotating anti-clockwise moves the station selector to the left. Because the radio station frequencies vary from one part of the country to another we are unable to list the frequencies in this booklet, we would suggest you refer to a newspaper or copy of 'Radio Times' for details.

Adjust the volume to your requirements rotating the volume control clockwise increases the volume and anti-clockwise reduces volume.

To switch off radio press 'RADIO ON OFF' key again.

For personal listening an earphone is supplied with your 'RADIO TEASMADE'. The earphone is provided with a jack which can be plugged into the socket adjacent to the loudspeaker grille. Inserting the jack automatically switches out the loudspeaker.




The Alarm

Push thumbwheel downwards until alarm hand points to time at which tea/coffee is required. **Note:** 1) Your 'RADIO TEASMADE' has a 12 hour clock movement, this means that although you can prepare it to make tea/coffee ie. you can fill kettle with water etc. anytime, it cannot automatically make tea/coffee 12 hours or more after the time at which you programmed it, ie. pressed down auto key of switch.

2) The thumbwheel alarm set can only be moved in one direction this is to ensure accurate setting of the alarm.

To use the 'RADIO TEASMADE' as an alarm clock only: Press down 'AUTO' key of switch. The radio will switch on or the buzzer will sound according to the alarm selected approximately 12 minutes before the time set and this should be taken into account when setting the alarm. It is recommended that the

kettle and teapot are removed when using as an alarm only.

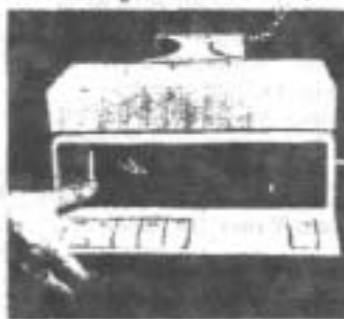

The Light

The 'RADIO TEASMADE' light can be switched on at any time by pressing down LIGHT key of switch.

To switch off press down 'CLOCK ONLY' key or if you have already prepared your 'RADIO TEASMADE' to make tea/coffee at a set hour press down 'AUTO' key.

Making Tea or Coffee

Remove kettle lid by rotating anti-clockwise and fill kettle with water to level mark.

DO NOT OVERFILL, boiling water may be ejected through vent hole above spout if overfilled.



Place lid in position and rotate clockwise to seal ensuring that lid engages correctly with kettle. When tightened lid should be level and protrude evenly above kettle body. If kettle lid is not fitted correctly seal may not be good enough for water transfer to take place and your 'RADIO TEASMADE' will not make tea/coffee nor will it provide an alarm.



Place kettle on platform and slide towards centre pillar to engage with connector.

WARNING - DO NOT CONNECT KETTLE DIRECT TO ELECTRICITY SUPPLY.

We suggest that you operate your 'RADIO TEASMADE' using the 'TEA NOW' key once or twice with only water in the kettle before making tea/coffee.



Put tea/coffee in teapot and replace lid. Place teapot in alcove so that it rests against central pillar. **Note:** If teapot is not in correct position your 'RADIO TEASMADE' will not make tea/coffee nor will it provide an alarm. Teapot must be in position on platform for your 'RADIO TEASMADE' to operate correctly.



Set alarm time to your requirements see 'The Alarm' section of this booklet for details. Press down 'AUTO' key of switch. Your 'RADIO TEASMADE' will automatically make your tea/coffee, switch on the light and wake you at the alarm set time providing you have taken into account points 1, 2 and 3 below.

- 1) You have pre-set the Radio or Buzzer volume to a level that will wake you. Refer to 'The Radio' or 'The Buzzer' instructions in this booklet for guidance.
- 2) If you require radio alarm you have turned to a Radio station which will be broadcasting at the alarm set time.
- 3) You have switched off the radio before going to sleep. To warn you of this your 'RADIO TEASMADE' light remains ON when both 'AUTO' and 'RADIO ON OFF' are selected.

To switch off Radio or silence buzzer press down 'LIGHT' or 'CLOCK ONLY' switch key, as required. Allow tea/coffee a minute or so to brew before pouring for best results.

If you require the Radio to remain switched on, we would advise you to press down 'LIGHT' or 'CLOCK ONLY' switch key and reselect Radio by pressing down 'RADIO ON OFF' switch key otherwise the radio is still controlled by the alarm clock circuit and it will switch off automatically after about 50 minutes.

Tea can be made at any time by pressing down 'TEA NOW' switch key, this switches on the heating element and light and enables a pot of tea/coffee to be ready for serving in about 12 minutes.

Important Points to note

- 1) The clock in your 'RADIO TEASMADE' has a 12 hour movement.
- 2) If using the Radio as your alarm, ensure that 'RADIO ON OFF' switch is off and earphone is not plugged in.
- 3) Check regularly that movement of kettle and moving platform is not restricted.
- 4) Remove kettle from 'RADIO TEASMADE' when filling with water and replace and tighten lid to seal after filling.
- 5) If liquids are accidentally spilt on or adjacent to 'RADIO TEASMADE', remove plug from supply socket and wipe dry with cloth.
- 6) The 'RADIO TEASMADE' is designed to transfer sufficient water from kettle to teapot to make 4 cups of tea/coffee. The kettle will still contain water usually to just above the level of the element.
- 7) Pressing down a switch key when one of the other radio switch keys is already depressed may momentarily sound the alarm. This effect may be safely disregarded. Continuous sound from the radio/buzzer however is a warning that the 'RADIO TEASMADE' has not been correctly prepared or that the alarm set time is reached.
- 8) Your 'RADIO TEASMADE' will not make tea/coffee unless teapot is in the correct position.
- 9) Ensure that free end of aerial is positioned clear of your 'RADIO TEASMADE'. Free end of aerial must not be inserted into appliance.

The Buzzer

To adjust buzzer loudness: Remove lampshade by inserting knife blade or similar thin object through slot in moulding to release catch. Remove kettle from platform and press down 'TEA NOW' and 'BUZZER' keys so that buzzer sounds.



Rotate adjustment knob: Clockwise i.e. direction marked - to reduce loudness. Anti-clockwise i.e. direction marked + to increase loudness.

When adjusted to your satisfaction refit lampshade by locating slots in rear of lampshade over the projections in the body behind lampholder. It should NOT be necessary to adjust setting again.



Care and maintenance of your Radio Teasmade

Before carrying out any maintenance operation disconnect from the mains supply.


Your 'RADIO TEASMADE' is manufactured from high-quality materials and should require little maintenance.

Occasionally however to keep your 'RADIO TEASMADE' looking bright and new, wipe over with a slightly damp cloth. Do not use cleaning fluids or detergents. The stainless steel kettle may be polished using a clean soft dry cloth.

If 'RADIO TEASMADE' light fails, the lamps probably need replacement, remove lampshade (see The Buzzer - instructions for guidance) to gain access to them.

Note: The 'RADIO TEASMADE' uses two 15 watt BC pygmy lamps. Do not replace with larger lamps or lamps with higher wattage.

Disengage lamp with anti-clockwise twist and fit suitable replacement.

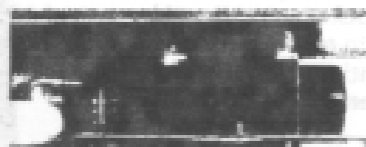

Refit lamp cover by locating the two slots at the rear over the projections on the central pillar and lower until the catch locks the cover in position.

To maintain your kettle in efficient working order occasional de-furring may be required particularly if you live in a hard water area. De-furring agents can be obtained from hardware stores and chemists and should be applied in accordance with the manufacturers instructions. If kettle spout is allowed to fur up, boiling water may be ejected through vent hole in kettle body.

Should your 'RADIO TEASMADE' require servicing, contact your nearest Goblin Service Depot to obtain information regarding servicing. Be sure to quote model number and serial number which are detailed on the rating label (situated in teapot alcove). When returning your 'RADIO TEASMADE' for service ensure that it is well packed and therefore unlikely to be damaged in transit.

We suggest that the polystyrene pack in which your 'RADIO TEASMADE' is supplied be retained as it is ideal for returning the appliance for service, should it be required.

Your Goblin Service Depots

LEATHERHEAD, Surrey
Goblin Works, Ermyn Way
Leatherhead KT22 8TZ
Telephone Ashtad 76121

BELFAST, NI
399-401 Castlereagh Road
Belfast BT5 0ND
Telephone 0232 56294

BIRMINGHAM
PO Box 184, Albion Works
Albion Street
Birmingham B1 3DL
Telephone 021 236 8292

KEIGHLEY
PO Box 12, Newton House
Cavendish Street
Keighley
West Yorkshire BD21 3RR
Telephone 0535 607681

Please note that these are no longer operational

In accordance with the Company's policy of continued development and improvement we reserve the right to modify the design without prior notice.

'TEASMADE' is a registered trade mark and the design embodies various patents.



GOBLIN (BVC) LIMITED A MEMBER OF THE BSR GROUP
LEATHERHEAD, SURREY. KT22 8TZ
Telephone Ashted 76121
Telex 28134

Printed in England August 1981



01-63715-00