

# Swan Compact Teasmade® Instructions & Guarantee

*Please read these instructions carefully. They have been prepared to help you get the best results from your teasmade and should be kept for your reference.*

**Switches must  
always be in  
"OFF" position  
when setting  
alarm and  
clock time.**



## **INTRODUCTION TO YOUR SWAN 'COMPACT' TEASMADE®**

Please read instructions carefully in order to obtain best results from the product.

### **PREPARATION FOR USE**

Check that the supply voltage details marked on the underside of the Teasmade are in accordance with your electricity supply.

#### **Fitting a Plug**

**WARNING – THIS APPLIANCE MUST BE EARTHED.**

THIS APPLIANCE COMPLIES WITH THE EEC DIRECTIVE 82/499 EEC IN RESPECT OF RADIO INTERFERENCE AND IS MANUFACTURED TO CONFORM TO THE LOW VOLTAGE ELECTRICAL EQUIPMENT (SAFETY) REGULATIONS 1989 AND IS DESIGNED TO COMPLY WITH BS3456.

FOR U.K. AND IRELAND ONLY:

#### **APPLIANCES WITH FITTED PLUG**

In event of replacing a fuse in the plug supplied, a 3 amp fuse approved by ASTA to BS1362 must be used.

If the socket outlets are not of the 13A BS1363 type, and therefore do not accept the plug connected to this appliance, cut off the plug.

When cut off, this plug is a shock hazard if inserted into a socket outlet and must therefore be disposed of safely.


Fit the appropriate plug according to the instructions in paragraph 'FITTING A PLUG'. With alternative plugs a 15 amp fuse must be fitted either in the plug or adaptor or at the main fuse box.

#### **Fitting a plug – IMPORTANT**

The wires in this mains lead are coloured in accordance with the following code:

|                 |         |
|-----------------|---------|
| GREEN & YELLOW: | EARTH   |
| BLUE:           | NEUTRAL |
| BROWN:          | LIVE    |

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured GREEN AND YELLOW must be connected to the terminal in the plug which is marked with the 'E' or by the earth symbol  or coloured green or green and yellow. The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N' or coloured black.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L' or coloured red. If a BS1363 13 amp plug is used, fit a 3 amp fuse. If any other plug is used fit a 15 amp ASTA approved fuse.

If in doubt, have this undertaken by a qualified electrician as we do not regard the repair of faults on a user fitted mains plug as part of the guarantee offered on this product.



# INSTRUCTIONS FOR USE

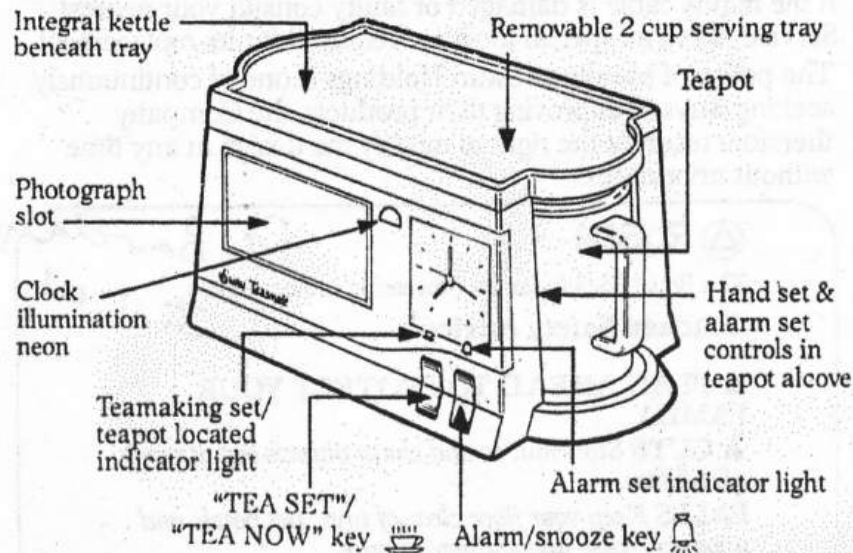

## 1. PREPARATIONS FOR USE

We recommend that you operate your Teasmade once or twice with water only using the "Tea Now" facility as detailed below. The Teasmade will then be ready to make your regular drink.

The clock starts immediately the appliance is connected to the mains supply.

## 2. CHANGING THE PHOTOGRAPH

If you wish to change the photograph see SPECIAL FEATURES point 1.

## 3. CLOCK SETTING

**IMPORTANT:-** The "tea" switch (☕) and "alarm" switch (🔔) should always be set to the "OFF" position before altering time or alarm settings.

The alarm set hand is coloured red and can be set by turning the red knob marked 🔔. This will rotate the hand anti-clockwise to the alarm time required.

The time hands are black and can be adjusted by turning the black knob marked ⌚ anti-clockwise. This will turn the hands in a clockwise direction looking at the front of the clock.

**WARNING:-** Turning the hands in an anti-clockwise direction will affect the alarm setting. The alarm is electronic. The alarm will not sound if the hands are turned manually past the set alarm time.

## AUTOMATIC TEAMAKING

- Remove the tray from the top.
- Remove kettle lid by turning it anti-clockwise.
- Fill only with water to level required using the teapot. Remember to dry the teapot afterwards. The kettle can only be used to heat water.
- Kettle has been designed to boil between 2 cups of water (minimum) and 4 cups of water (maximum). When using kettle at less than full capacity always ensure that there is sufficient water in kettle to completely cover kettle element during operation.
- DO NOT OVERFILL or water may be ejected through transfer pipe and spill over appliance.
- Place kettle lid in position and rotate clockwise to seal ensuring that the arrows on the lid and body are aligned.
- WARNING:-** Make sure kettle lid is fully tightened or your Teasmade will not function correctly.
- Ensure teapot is dry. Place tea/coffee/soup or chocolate etc. in teapot.
- Replace lid ensuring it is correctly seated.
- The tray may be refitted.








## IMPORTANT – TEAPOT LOCATION

With the ceramic teapot supplied with your Teasmade, it is essential that it is correctly positioned to receive boiling water and operate the safety switch.

To ensure correct teapot positioning, simply:



1. Place teapot in alcove as far as it will go.
2. Ensure handle is facing towards the open side of the teapot alcove.


If teapot is incorrectly positioned the  indicator will fail to light when the  "Set" or  "Now" functions are selected and teamaking will not take place. Re-adjust the teapot as above.

- Set the alarm time required. Both switches must be in the "OFF" position when setting.
- Set both switches to "Set".  
Both indicators should light to show that the teapot is in position and functions have been selected.
- Approximately 10 minutes before the set alarm time drink-making will begin. Your drink will be ready when the buzzer sounds at the set time.
- If the buzzer is not required, leave the  switch in the "OFF" position.
- Once the drink is made, return the  switch to the "OFF" position.
- Clean teapot after use.



**NOTE:-** The Clock has a 12-hour movement. The alarm cannot be set beyond this period. Neither can drinks be made using the clock.

## "TEA NOW" FACILITY


- Fill the kettle.
- Correctly position the teapot.
- Press  key to "NOW".  
The  indicator will light if the teapot is correctly located. Your drink will then be ready in 8 minutes (approx.).
- Allow tea/coffee a minute or two to brew for best results or, if soup, chocolate etc., is preferred, give drink a quick stir before pouring.


**WARNING:-** Make sure the drinkmaking key  is turned to the "OFF" position after use. This will prolong the life of the element.

## USING YOUR TEASMADE AS AN ALARM ONLY

- Leave kettle empty.
- Set the required alarm time. Both switches must be in the "OFF" position when setting.
- Press only the  key to "Set".
- The buzzer will sound at the time set.
- To cancel the buzzer switch  key to "OFF".

### SNOOZE FUNCTION

When the buzzer sounds the "SNOOZE" function may be selected by pressing the  switch to "SNOOZE". The buzzer will be silent for approx. 4 minutes.

When the buzzer sounds again a further snooze period may be selected by pressing the  switch to "OFF" and returning it to "SNOOZE".

## SPECIAL FEATURES

### 1. PHOTOGRAPH SLOT

A slot is provided on the left hand side of the clock lens to accept a photograph of your choice. To insert a 6" x 4" photograph of your choice remove the printed floral card and slide in your own photograph behind the photo frame.



## 2. TRAY

Cups may be placed on the detachable serving tray fitted to the top of the Teasmade. Always replace the tray after use to avoid loss or breakage. Cups may be placed on the tray when in position on the Teasmade if required.

## 3. MAINS LEAD EXIT POINTS

The mains lead can be arranged to exit the Teasmade from the rear or either side via the channel on the base.

## CARE AND MAINTENANCE

Disconnect plug from mains before carrying out maintenance of any kind.

### a. CLEANING YOUR TEASMADE

Use a damp cloth only, do not use cleaning fluids or detergents.

### b. DESCALING

**Important – Please read this section carefully.**

In hard water areas, “furring” up is a common problem. To remove deposits of scale, we recommend that you use a proprietary brand of descalant (use only the formic or sulphamic acid type) This may be obtained from most nationally based chemist or hardware stores.

Frequency of descaling will vary from area to area and with usage of appliance. The thickness of scale may be checked by inspecting the inside of the kettle. Should the water transfer prematurely before the water has boiled this may indicate scale build up in the transfer pipe.

If you can see an excessive build up of scale proceed as follows:

1. Place 2 level dessertspoons of descalant in teapot and add boiling water to the maximum 4 cup level stirring until descalant has dissolved completely.
2. Pour hot solution into integral kettle taking care to avoid spillage.
3. Replace empty teapot in alcove.
4. Give solution a good stir in kettle (using non-scratch spoon or similar) for 2 minutes to dislodge any scale inside kettle.
5. Leave solution to stand for 30 minutes.
6. Stir solution again, replace kettle lid and operate appliance using “Tea Now” facility as previously described.
7. Dispose of solution after water has transferred.
8. If scale has **NOT** been completely removed repeat operation again with fresh solution. (Note: This second solution may be used repeatedly should further traces of scale require removal.)
9. After descaling operate appliance at least once or twice with fresh water using “Tea Now” facility to remove all traces of descaling fluid from kettle. Also rinse out teapot used to fill kettle.

**IMPORTANT: To avoid damage to surface finish any spillage of descalant should be immediately removed.**

**WARNING:** If transfer pipe is allowed to fur up, the teamaking function will be prevented from operating correctly and high pressure steam and water will be ejected into the teapot.

**NOTE:** If you live in a soft water area, descaling is not usually necessary.



## FLEX REPLACEMENT

If the mains cable is damaged or faulty consult your nearest Service Agent as special tools are required for its replacement. The policy of Moulinex Swan Holdings is one of continuously seeking ways of improving their products, the Company therefore reserves the right to modify the design at any time without prior notice.



**RoSPA**

The Royal Society for the Prevention of Accidents

### Kitchen Safety Advice

#### ▲ PLAN AHEAD TO PROTECT YOUR FAMILY

▲ **CUTS** Store knives and sharp objects out of reach of children.

▲ **FALLS** Keep your floor clear of toys, pet bowls and wipe up grease and spillage at once.

▲ **BURNS** Keep mugs and anything hot well out of children's reach.

▲ **POISONS** Keep medicines and kitchen chemicals in a locked cupboard.

▲ **APPLIANCES** Buy good quality goods made to British Standards, and follow the instructions for use.

▲ **FIRE** Never leave food cooking unattended unless the equipment has automatic controls.

## GUARANTEE

This appliance has been manufactured to exacting standards and the Company guarantees that should any defect in materials or workmanship occur within 1 year of the date of purchase (but not damage caused by misuse, negligence, damage in transit or teapots broken in use), we will repair or, at our option, replace the defective part free of charge for labour or materials - always provided the appliance has been used for normal domestic purposes in the U.K. and has been operated on an electric supply which matches that shown on the rating plate. This guarantee in no way diminishes the buyer's statutory or legal rights.

We believe you will be completely satisfied with your purchase. In order to assist us to help you, we would appreciate your help in completing and returning the attached section. Please remember to keep your sales receipt as proof of purchase as sales receipts must accompany all claims made within the guarantee period.

SERIAL NUMBER .....

DATE OF PURCHASE .....

**SERVICE DEALERS** Should your Teasmade require servicing, contact our Service Department at the address below:

Moulinex UK Ltd, Merlin Park, Wood Lane, Erdington  
Birmingham B24 9LZ. Tel No 0845 723 1072

